INTRODUCTION

Thank you for purchasing the focusvape PRO S version!

This is an advanced OLED display aromatherapy device with full temperature control (80 $^{\circ}\text{C}$ -240 $^{\circ}\text{C}$ / 176 $^{\circ}\text{F}$ -464 $^{\circ}\text{F}$) for vaporizing botanical herbs. The sealed airflow path, high grade ceramic heating chamber and borosilicate glass mouthpiece makes the vaporization process exceptionally amazing give you the desired effect of baking. With this *focusvape* PRO S, we hope you will have a great vaping experience.

To fully understand the functions of your *focusvape* PRO S, please read this manual carefully.

OVER VIEW

- 1 * focusvape PRO S
- 1 * Original LG / Samsung 3,200mAh high-drain battery
- 1 * 5pin Micro USB cable
- 1 * Additional glass mouthpiece
- 1 * Packing tool
- 1 * Clean Brush
- 3 * Screen filter
- 1 * User Manual




Specification

Colors	Black/Silver/Gun metal/Black blue
Size	172 x 23.6 (mm)
Weight	180 (g)
Battery capacity	Original LG / Samsung 3,200mAh high-drain battery
Battery Voltage	4.2V
Temperature levels	Various temperature : 80 °C-240 °C / 176 °F-464 °F (Factory default setting temperature at 190 °C / 374 °F)

STEP 1

Unscrew the mouthpiece and filtration chamber to reveal the ceramic oven.

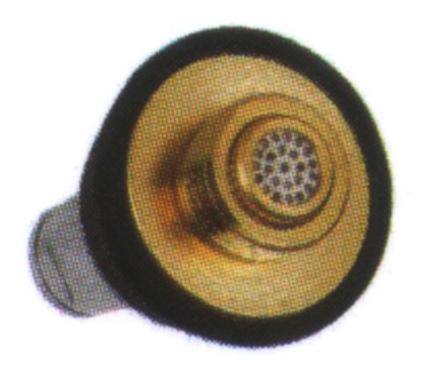



STEP 2

Load your botanical herbs into the ceramic oven.



STEP 3

Attach the mouthpiece and filtration chamber back onto the main body, ready for you to vape.



STEP 4

Press either one of the buttons 3 times within 2 seconds to turn on the device, it will then vibrate, and the *focusvape* logo will display on the screen.



STEP 5

Press the ◀ or ▶ button to select your desired temperature unit either Celsius System (°C) or Fahrenheit System (°F), then press the button twice to save.

Press the or button to adjust the temperature, each press will add/decrease 1 °C or 1 °F accordingly, by holding down a button the temperature setting will increase or decrease rapidly.

Once you have set the temperature you want to vape, the oven immediately starts heating up, the unit uses haptic vibration to indicate when it has reached your desired temperature setting then you can start to inhale slowly to enjoy.

ADJUSTABLE AIRFLOW/ SEALED AIRFLOW

Rotate the dial ring on the device to adjust the flow of air, setting it to the 3 holes will give you the greatest stream.

Important Feature:

To give you the purest taste, we have separated the airflow pathway from the electronics, so the airflow goes directly from the outside air to the ceramic oven.



POWER OFF / AUTO POWER OFF

Press both the and buttons at the same time for 2 seconds to turn off the device, the device will vibrate to let you know it is now turned off.

Each cycle duration of 8 minutes (5 minutes of working + 3 minutes of sleep mode), after that, the device will automatically power off.

MEMORY DATA FUNCTION

When you turn your unit on again, it will heat automatically to reach the previous temperature setting you last used.

Remark: Every time the battery is removed from the device, the device will request a selection on the temperature unit as above. (this is because the IC will lose its memory data)

CHARGING

- Initially charge your *focusvape* PRO S device for 3 to 4 hours or until the unit is fully charged, the power of the vaporizer will be shown with bars on the battery icon while charging, full power will be shown with a full battery icon.
- *focusvape* PRO S battery can also be removed out from the device and be charged through a separated Li-ion 18650 wall charger.
- Battery will need recharging when the battery icon on display flashes 5 times, or that your device will not heat up.
- The device supports a passthrough function.

Attention: In order to preserve the battery life, if the device has been fully discharged, then during the charging process, we have a setting on the software to restrict use the device when battery icon less than 1 bar (because it needs a high discharge current while the unit is heating up), so please kindly wait until the battery icon reaches to 1 bar at least.

SLEEP MODE / WAKE UP

Every heating cycle has a duration of 5 minutes, after which the display turns off, the device will go into a sleep mode for a further 3 minutes, and the oven will stop heating.

In this sleep period, press any button down for 2 seconds to wake up the device ready to vape again, once it has reached your desired setting.

13

MAINTENANCETIPS

In the case that vapour is not being released, please use the packing tool to gently stir the Botanical herbs in the ceramic oven.

Clean the mouthpiece:

Use a cotton swab and wipe the inner part of the mouthpiece then wipe with a damp paper towel.

Clean the ceramic oven:

Use the brush tool to gently clean the walls of oven

Note: Make sure your *focusvape* PRO S is powered off and cool before cleaning.

WARNING

This device contains Lithium-ion battery, please be sure to discard of them responsibly in a recycle bin. Do not dispose directly into trash. Do not overcharge it. Do not short circuit it.

Some Li-ion chargers on the market may have technical deficiencies that may cause it to charge the Li-ion batteries incorrectly or at an improper rate. It is your responsibility solely to assure the charger you purchased works properly. Always monitor charging process to assure batteries are being charged properly. Failure to do so may result in fire.

15

WARRANTY

focusvape warrants this device against defects in materials used to create this product for a period of 1 (one) year from the retail purchase date. Warranty can only be used by the original end-user purchaser, if a claim is received and valid, **focusvape** promises to either:

- 1, Repair the product defect
- 2, Exchange the product

Limited Warranty:

Does not apply to normal performance degradation

Does not apply to battery

Does not apply to the glass mouthpiece

Does not apply to glass mouthpiece